


## Slim Camera Series Instruction Manual

- |                         |                           |
|-------------------------|---------------------------|
| 1. Back Door            | 8. Film Take-up Spool     |
| 2. Door Switch          | 9. Shutter Release Button |
| 3. Film Chamber         | 10. Film Counter          |
| 4. Film Rewind Shaft    | 11. Viewfinder            |
| 5. Film Take-up Chamber | 12. Film Rewind Button    |
| 6. Film Advance Wheel   | 13. Film Rewind Crank     |
| 7. Film Sprocket Wheel  |                           |

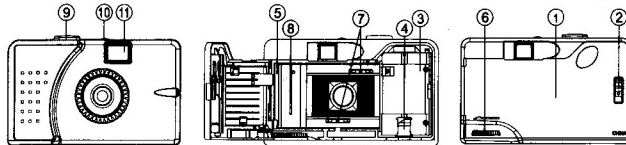

### Loading the Film

- Lift the Back Door (1) open by sliding down the Door Switch (2).
- Place a roll of film into the Film Chamber (3). Insert the hollow end of the film to the Film Rewind Shaft (4).
- When the Film is fully in place, pull the tip of the film slightly and insert it into the slit on the Film Take-up Spool (8).
- Turn the Film Advance Wheel (6) a little, and make sure that the film perforations are engaged with the teeth of the Film Sprocket Wheel (7).
- If the Film Advance Wheel is locked, press the Shutter Release Button (9) once. Close the Back Door after the film is loaded correctly.
- Rotate the Film Advance Wheel until it stops. Press the Shutter Release Button once. Repeat this procedure until the Film Counter (10) shows "1". The Film Counter counts the number of the picture that you are going to take for the roll of film in the camera.

### Taking Pictures

- Compose your picture by looking through the Viewfinder (11) from the Eyepiece.
- The object is to be at least 1.5M away from you.
- Press the Shutter Release Button gently.
- After taking a picture, turn the Film Advance Wheel until it stops.
- Repeat steps 1 to 3 for your next picture.
- Your camera should be used only to take outdoor pictures in sunny sky.

### Unloading the Film

- After taking the last pictures, depress the Film Rewind Button (12).

#### CAUTION!!

If you rotate the Film Rewind Crank without pressing the Film Rewind Button, it may cause a break of the Film Rewind Crank. Please make sure the Film Rewind Button is pressed when you rotate the crank.

- Flip up the Film Rewind Crank (13) and rotate it in the direction of the arrow until the film is completely rewound.
- When the film is completely rewound, the Film Rewind Crank will be turned freely.
- Open the Back Door and remove the film for processing.

### Spec

• Lens	super wide-angle 22mm, plastic, aperture f/11
• Distance	1.2mm ~ ∞
• Shutter Speed	1/125
• Size	W100 × H58 × D26 75g
• Film Type	35mm
• Accessory	Strap, Manual

### Warranty

This warranty is valid for a period of 30 days from the date of purchase. Please understand that this is a toy-camera so we cannot repair it but we will exchange the defective one for a new one if the camera had a workmanship defect or similar malfunction. Please keep this warranty card. If you lose this card or return the camera after 30 days we will not be able to exchange it.

For further information, please contact [info@powershovel.co.jp](mailto:info@powershovel.co.jp)